


INSTALLATION INSTRUCTIONS

Components

- A Left upright (1)
- B Right upright (1)
- © Support Poles (10)

For installation, you will need:


- **1** Level
- Hardware

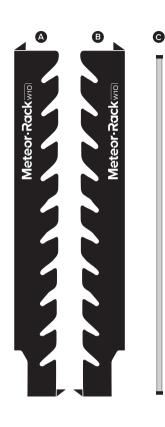

Steps

These instructions are applicable for installation into traditional wood studs on 16" centers

CAUTION (1)



ata maunting hardware with a weight

Acquire the appropriate mounting hardware with a weight rating to meet the intended use.

- Align edge of left upright with the center of stud (If mounting to studs through drywall, use a stud finder or small nail to locate stud center)
- Using a level for accuracy, mark the three mounting positions at the edge (see diagram below)
- Attach to wall *do not fully tighten hardware until all three bolts have been started and the upright is level
- 4. Fasten the bottom of the uprights to the ground (optional)
- 5. Repeat steps 1 to 4 on the opposite side
- 6. Hang support poles **(c)** on the uprights, balancing the overhang on each side

